ORDER NO. TD94050486C2

Service Manual

Mini Cassette

RQ-X20

Stereo Cassette Player DOLBY SYSTEM*

Colour

(K)... Black Type

Area

Suffix for Model No.	Area	Colour
(E)	Europe.	(K)
(EB)	Great Britain.	

MECHANISM SERIES : AR20

■ SPECIFICATIONS

Power Requirement:	Battery; DC 1.5V one "AA" size (R6/LR6) battery Rechargeable battery; DC 1.2V (included rechargeable battery) AC; with optional AC adaptor RP-AC11
Power Output:	5 mW + 5 mW
Input:	DC IN; 1.5V (⟐-⊙-⟐)
Output:	Headphones; 20 Ω (φ3.5)
Dimensions:	109.7(W) × 80.9(H) × 28.6(D)mm
Weight:	181g (with rechargeable battery)
Frequency Response: (—6dB)	31.5 ~ 14,000Hz (Normal/CrO_2/Metal)
Tape Speed:	4.8cm/S
Track System:	4-track 2-channel stereo playback
Charger	
Input:	AC 230V(For UK, 230 ~ 240V) 50Hz, 4W
Output:	DC 350mA, 1.2V

Notes:

1. Weights and dimensions shown are approximate.
2. Design and specifications are subject to change without notice.

※ Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"Dolby" and the double-D symbol are trade marks of Dolby Laboratories Licensing Corporation.

Panasonic®

■ LOCATION OF CONTROLS

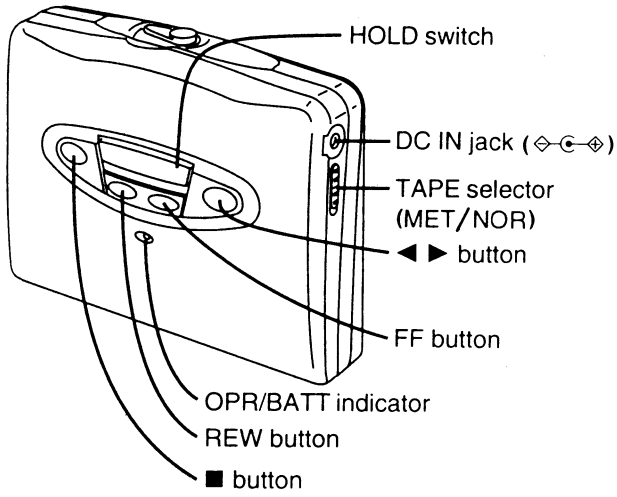

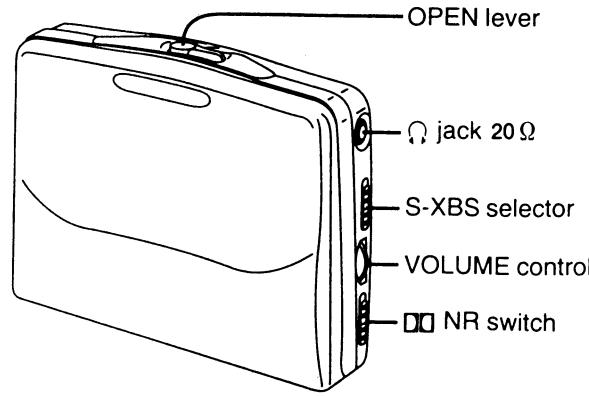

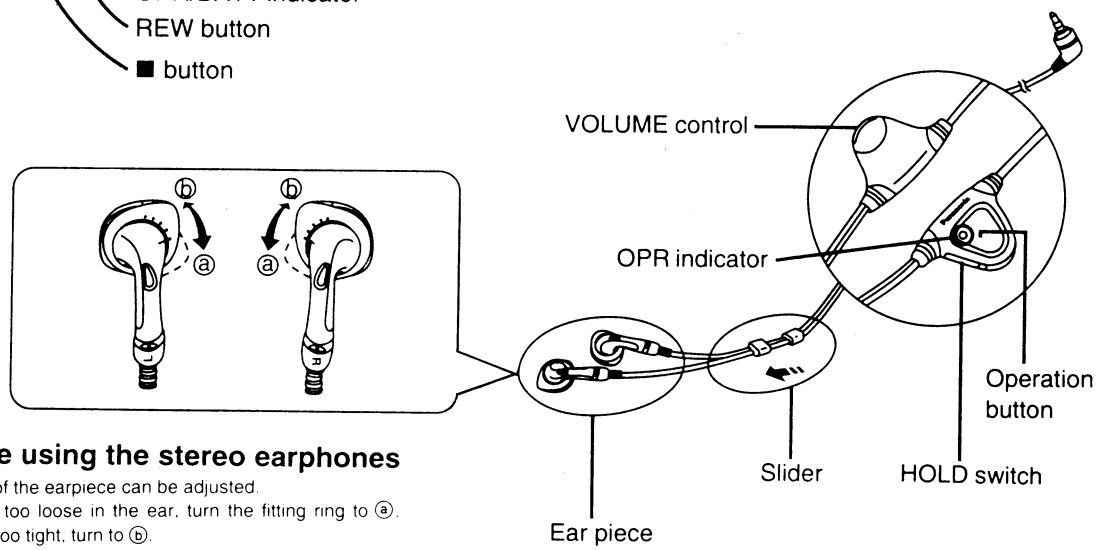

● Before using the stereo earphones

The size of the earpiece can be adjusted.
When it's too loose in the ear, turn the fitting ring to ⓐ.
When it's too tight, turn to ⓑ.

● REMOTE CONTROL OPERATION

Before using, plug the stereo earphones into the ∩ jack and be sure to release the hold state on the remote control. When not in use, slide up the slider to prevent entanglement of the cord.

To adjust the volume
Before using the VOLUME on the remote control, be sure to adjust the volume control on the main unit. "5–7" is the average volume level.

■ To change the tape operation

- • Press once to play and stop.
- ▬ Press and hold during playback to change the direction.
- •• Press twice for fast forward or FF TPS.
- ••• Press three times for rewind or REW TPS.

●When pressing the button twice or three times in succession, press it within one second and at equal interval.

■ POWER SOURCE

● **Dry cell battery**
Insert a R6/LR6 battery (UM-3 or equivalent, not included).

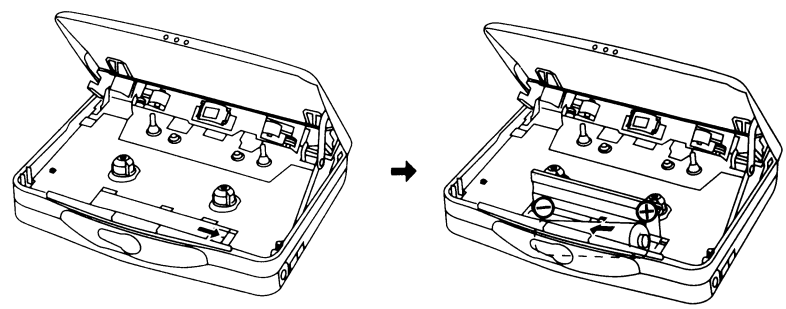

■ ACCESSORIES

● Stereo earphones with remote controller RFEV124P-KS

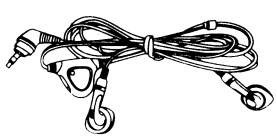

● Charger



RFEB102E
(for Continental Europe)



RFEB102B (for UK)

● Rechargeable battery
.... P-70AARC/A3B



■ MEASUREMENTS AND ADJUSTMENTS

●ADJUSTMENT INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING ADJUSTMENT	
1. Set volume control to maximum. 2. Set Dolby NR Switch to OFF. 3. Set Metal/normal switch to NORMAL. 4. Set S-XBS Switch to OFF.	5. Set hold switch to OFF. 6. Set power source voltage to 1.5V DC. 7. Output of signal generator should not be higher than necessary to obtain an output reading.

• CONTROL POSITIONS AND EQUIPMENT USED

1. Frequency counter

●TAPE SECTION

ITEM	TEST TAPE	MEASUREMENT POINT	ADJUSTMENT POINT	PROCEDURE
Tape speed	QZZCWAT (3kHz, −10dB)	Connect the frequency counter to Headphones jack (20Ω) (Refer to Fig. 1)	VR2 (Refer to Fig. 2)	Playback the central part of the tape and adjust VR2 so that the tape speed is as follows. Forward: 2990 ~ 3010 Hz Reverse: 2940~3060Hz Make sure that the frequency range in within ±60Hz for between "Forward" and "Reverse" mode.

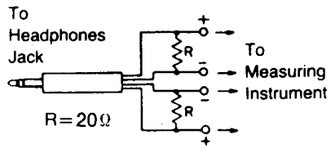

Fig. 1

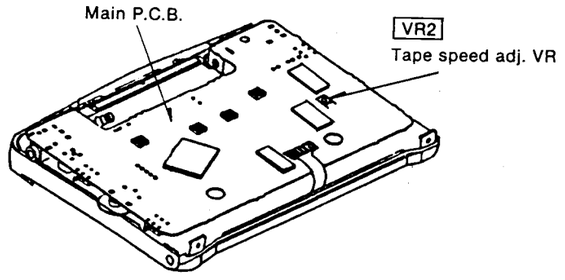

Fig. 2

■ PROCEDURES FOR DISASSEMBLY OF THE MAIN PARTS ON THE MECHANISM

• How to remove the mechanism

Follow the procedures in Ref. Nos. 1~4 in the Disassembly Instructions. (See page 5.)
※After replacing the parts, refer to the notes for assembly. (See page 7.)

• How to remove the head block and pinch roller

1. Follow the procedures in Ref. Nos. 1 and 4 in the Disassembly Instructions, remove the cabinet ass'y and cassette lid ass'y. (See page 5.)
2. Unsolder the head FPC. (7 points.) (See Fig. 3.)

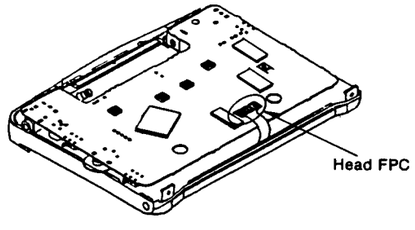

Fig. 3

3. Remove the head block in the direction of the arrow ① and ②. (See Fig. 4. and 5.)
4. Remove the pinch roller in the direction of the arrow ③. (See Fig. 6.)
5. Remove 2 springs in order to remove the pinch roller. (See Fig. 7.)

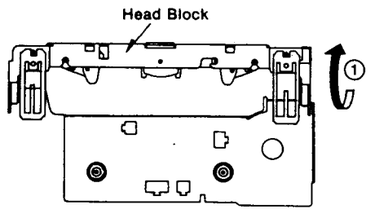

Fig. 4

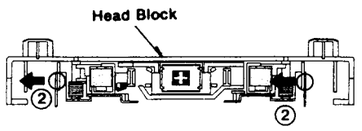

Fig. 5

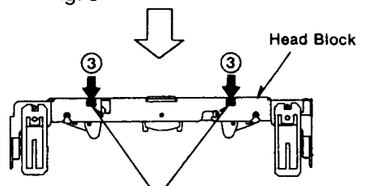

Fig. 6

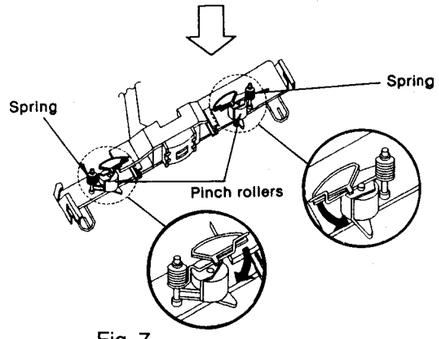

Fig. 7

• How to remove the motor and belt

1. Follow the procedures in Ref. Nos. 1 and 2 in the Disassembly Instructions. (See page 5.)
2. Remove 2 screws (❶, ❷). (See Fig. 8.)
3. Remove the motor in the direction of the arrow. (See Fig. 9.)
4. Remove the belt from the motor. (See Fig. 9.)

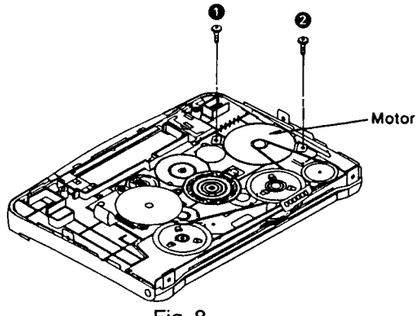

Fig. 8

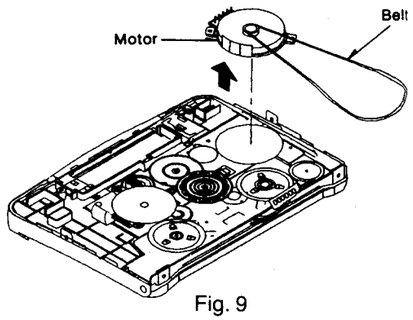

Fig. 9

• How to remove the rotary switch

1. Remove 3 screws (❶~❸). (See Fig. 10.)

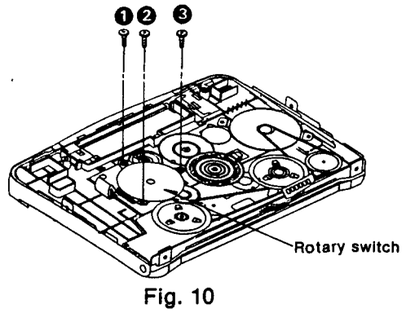

Fig. 10

■ DISASSEMBLY INSTRUCTIONS

Ref. No. 1 — **Removal of the rear cabinet**

Procedure 1

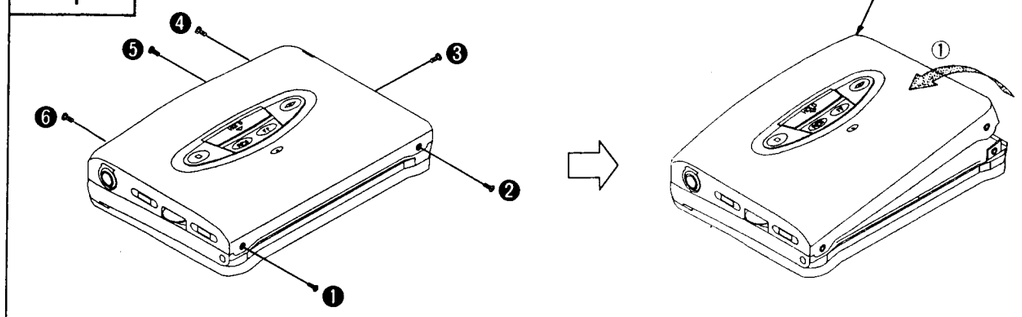

1. Remove 6 screws (❶~❻).
2. Remove the rear cabinet in the direction of arrow ①.

Ref. No. 2 — **Removal of the main P.C.B.**

Procedure 1→2

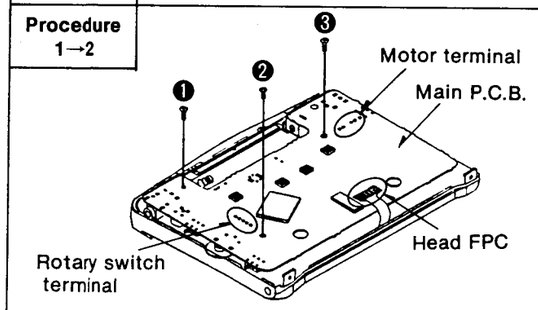

1. Remove the 3 screws (❶~❸).
2. Remove 7 solders of the head FPC.
3. Remove 5 solders on the motor terminal.
4. Remove 5 solders on the rotary switch terminal.

Ref. No. 3 — **Removal of the cassette lid**

Procedure 1→2→3

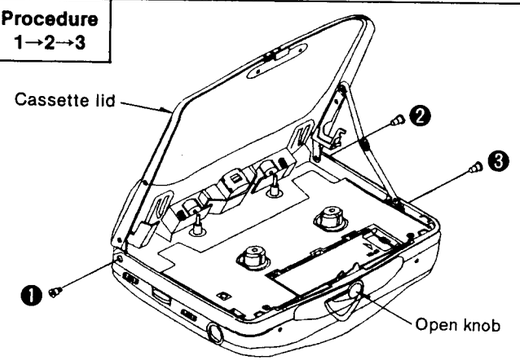

1. Push the open knob, and then open the cassette lid.
2. Remove 3 screws (❶~❸) in order to remove the cassette lid.

Ref. No. 4 — **Removal of the middle cabinet and mechanism**

Procedure 1→2→3→4

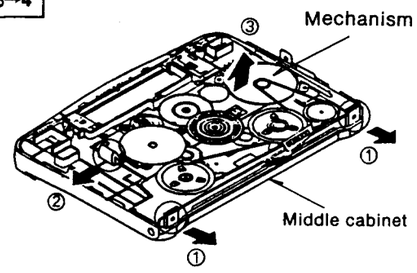

1. Remove the middle cabinet in the direction of arrows ①, ② and then remove it in the direction of arrow ③.

Ref. No. 5 — **Removal of the link angle ass'y**

Procedure 5

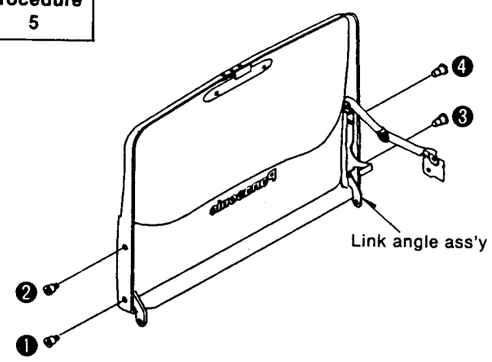

1. Remove 4 screws (❶~❹).

Ref. No. 6 — **Removal of the open knob**

Procedure 1→3→6

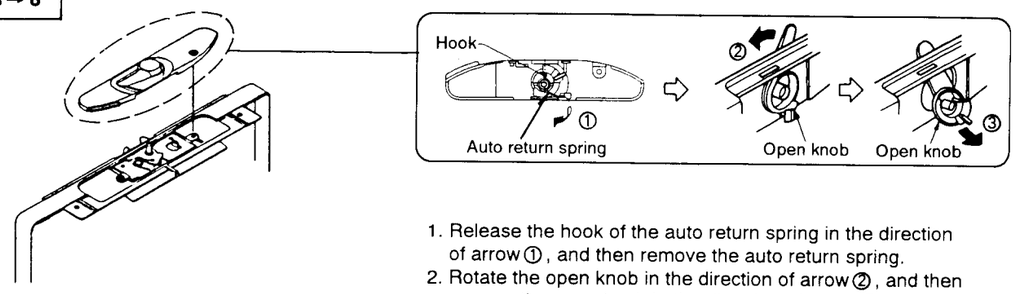

1. Release the hook of the auto return spring in the direction of arrow ①, and then remove the auto return spring.
2. Rotate the open knob in the direction of arrow ②, and then remove the open knob in the direction of arrow ③.

Ref.No. 7 — **Removal of the cam lock unit**

Procedure 1→3→6→7

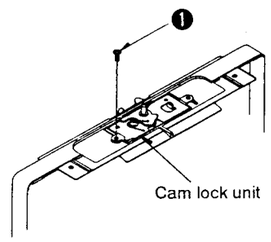

1. Removal the 1 screw (❶).

Ref.No. 8 — **Removal of the battery cover**

Procedure 1→3→8

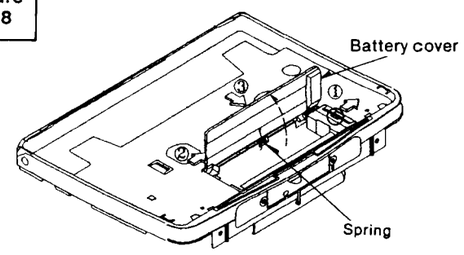

1. Open the lithium battery cover in the direction of the arrow ①.
2. Remove the battery cover in the direction of arrow ② and ③.
3. Remove the spring.

Ref.No. 9 — **Removal of the switch knobs**

Procedure 1→9

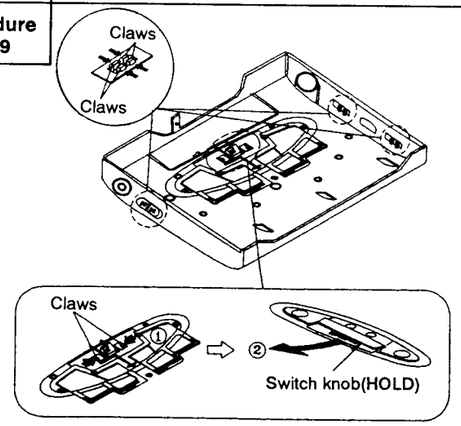

- Release the claws of knobs in the direction of arrow, and then remove the switch knobs.

Ref.No. 10 — **Removal of the mechanism operation button**

Procedure 1→10

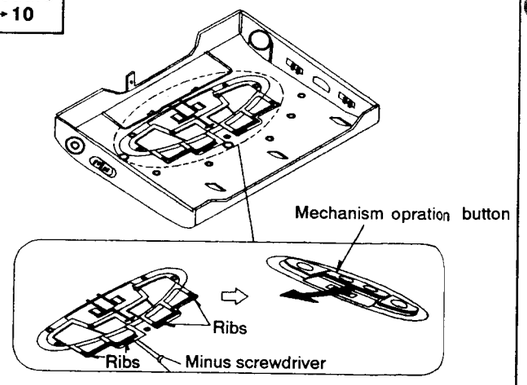

- Release the ribs of mechanism operation button with small tip of minus screwdriver, and then remove the mechanism operation button.

Notes for assembly

■Notice for assembling the rotary switch

1. Move the gear lever manually until hole Ⓐ match the hole of chassis.
2. Move the change lever manually until hole Ⓑ match the hole of chassis.
3. Rotate manually the rotary switch gear until the point © (▶) direct the REW mark (◀◀).
4. To fix the rotary switch, use 3 screws to tighten it.

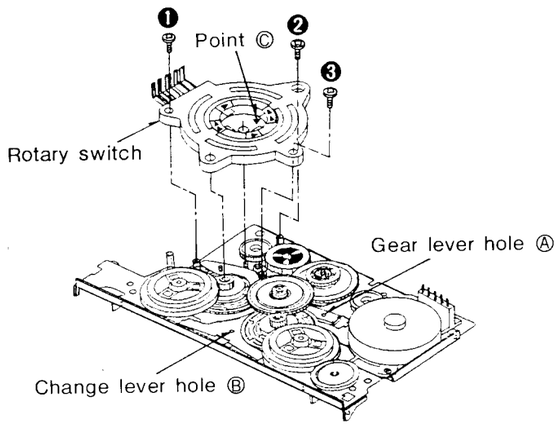

■Notice for assembling the mechanism

1. Install the mechanism in the direction of arrow ①.
2. Engage the mechanism in the ribs of the middle cabinet.
3. Make sure the ribs fully to the mechanism.

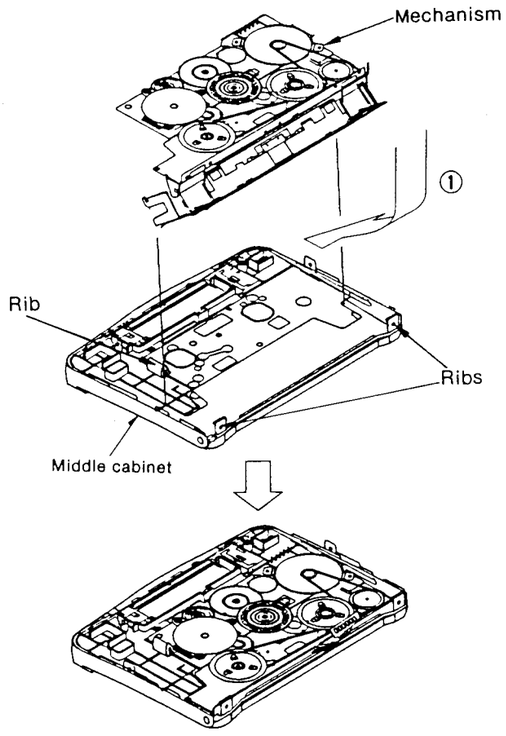

■Notice for installing the knobs and assembling the cabinet ass'y

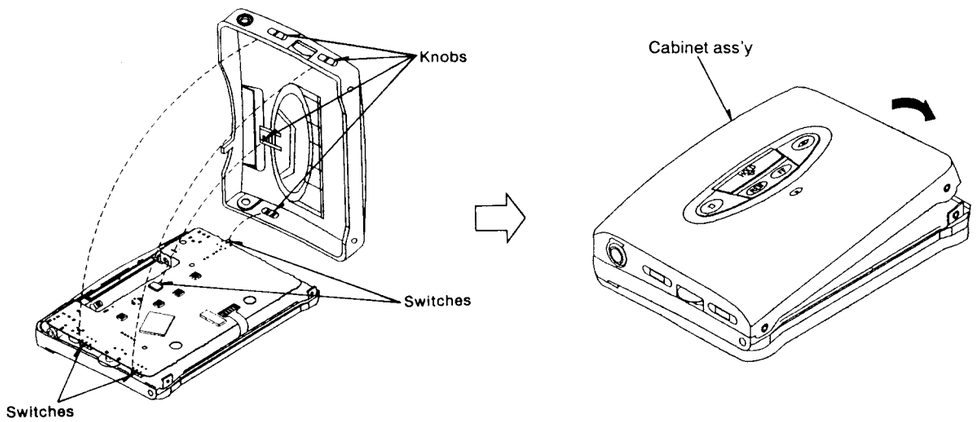

1. Make sure the bosses of the switch are fit in the knobs of the switch when assembling(4 points).

Note: Before installing the switch knob, be sure to check the claws for defects that would render the claws unserviceable.
(If a white line like white wax on a claw is found, the claw may be broken when installing the switch knob.)

2. Make sure the cabinet ass'y is installed completely and the knobs can be operated after assembled.

■HOW TO CHECK OPERATIONS DURING DISASSEMBLY AND SERVICING

1. Cassette section

- Check operations during disassembly following the steps.

1) Set the condition as shown in Fig. 1 in accordance with Disassembly Instructions. (DO NOT remove the solders on the head FPC.)
2) Connect the PCB and motor and rotary switch with the extension cord (RFKZ0002).
3) Short the short land with a soldering and then short-circuit them.
   - Short the short land Ⓐ for Power supply of AMP ON.
   - Short the short land Ⓑ for Power supply of motor ON.
   - Short the short land © for Microcomputer reset.
   - Short the short land Ⓓ for Power supply of motor CCW.
   - Short the short land Ⓔ for Open/Close SW: ON.

   Note: See next page for the points to be short-circuited.
4) Connect the battery (−) terminal to the mechanism chassis earth with a lead wire.
5) Manually operate the rotary switch gear when checking the FWD/REV/FF/REW operation.
   - Rotate manually the rotary switch gear (Fig 1-1) as the arrow direction shown until the checking mode you need direct the pointer.
6) Connect the battery (+) terminal and the battery (−) terminal foil to the power source (DC 1.5V) with a lead wire. (Fig. 1)

Notes:

① You have to turn off the power when you want to change mechanism mode.
② Even if the mechanism unit is switched to the REV mode in Step 6, the head change-over switch (IC1) will remain in the FWD position, so set the FWD mode to check the audio.
Before checking the operation problems and adjustments, be sure to release the hold state.
(Hold switch (S3): "OFF")
③ After checking,
unsolder the short land Ⓐ, Ⓑ, ©, Ⓓ and Ⓔ.

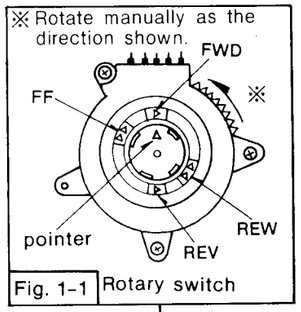

Fig. 1-1 Rotary switch

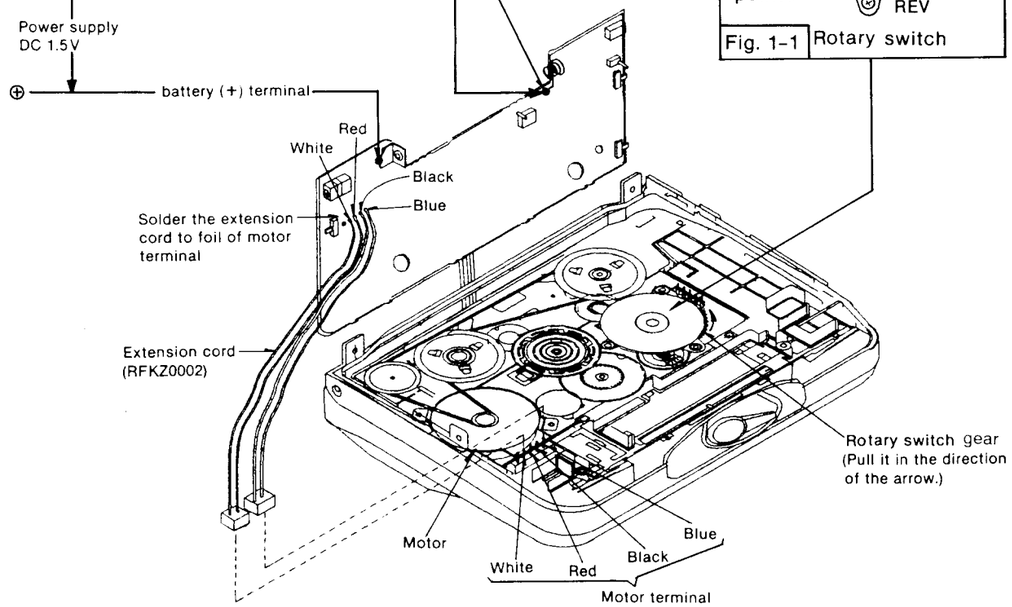

Fig. 1

• Short points

SCHEMATIC DIAGRAM

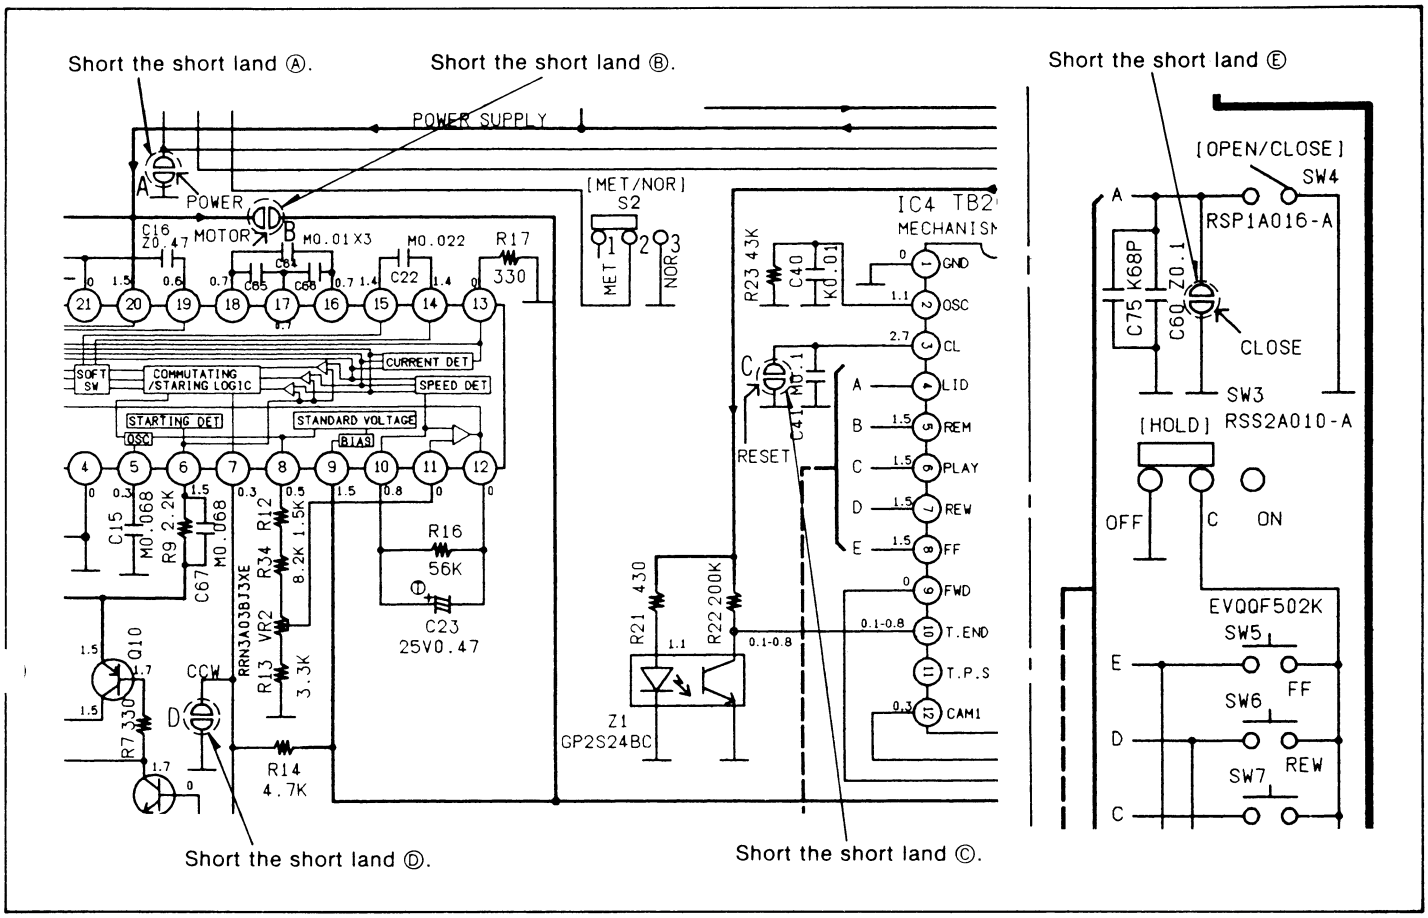

PRINTED CIRCUIT BOARD

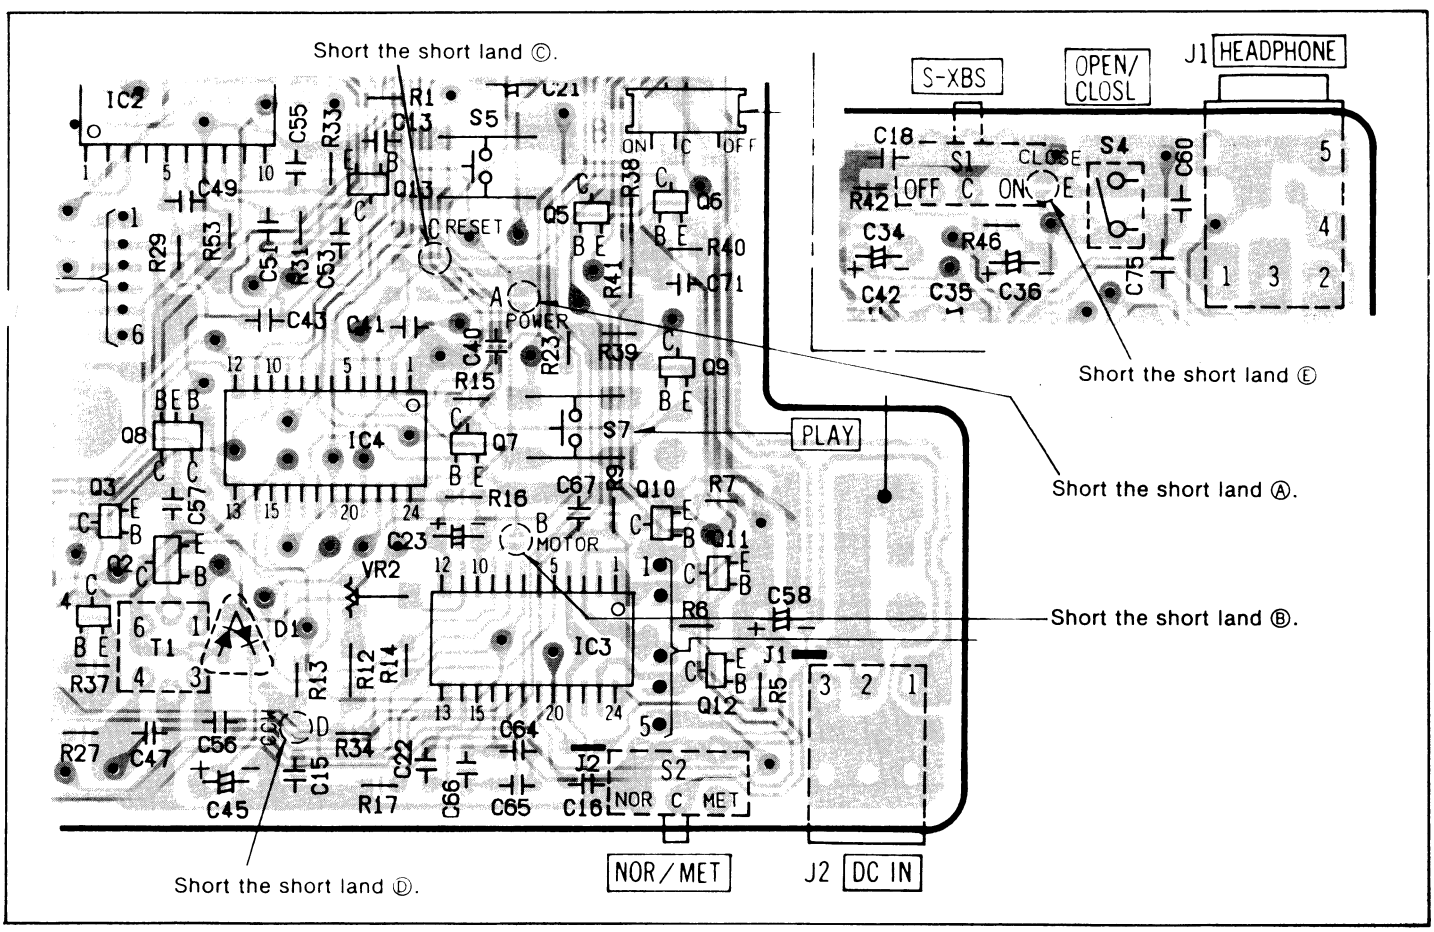

■SCHEMATIC DIAGRAM

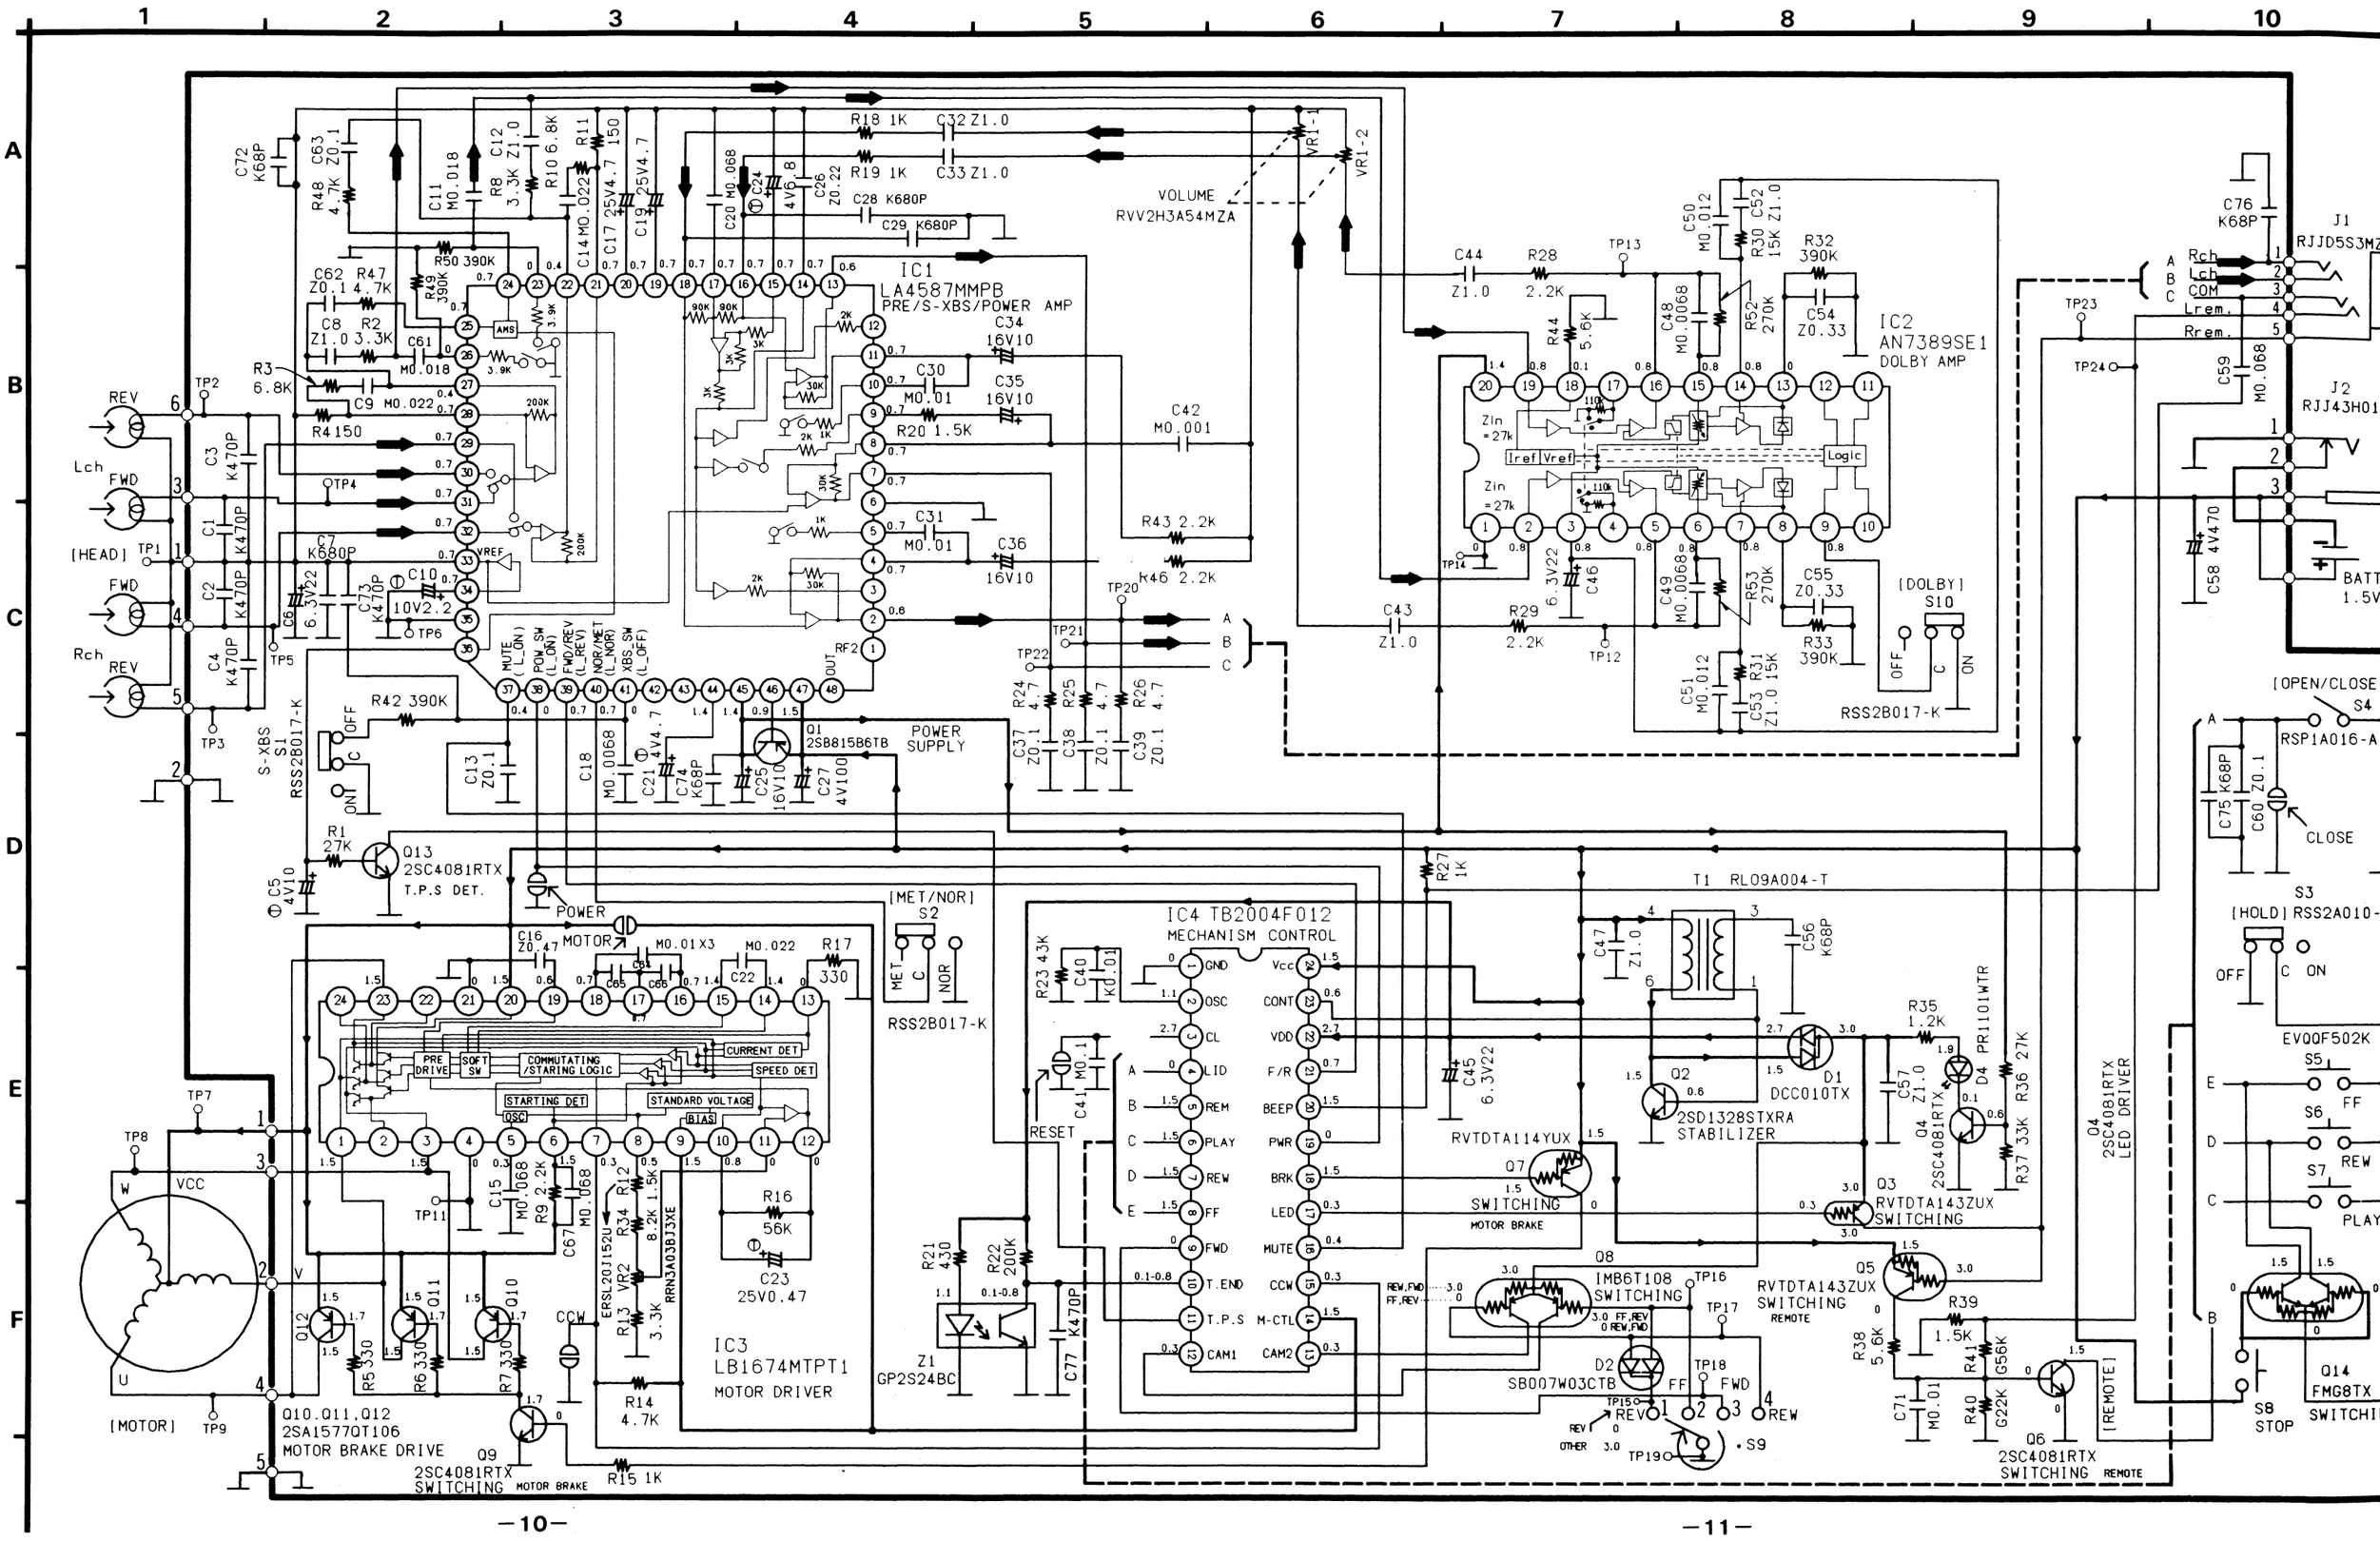

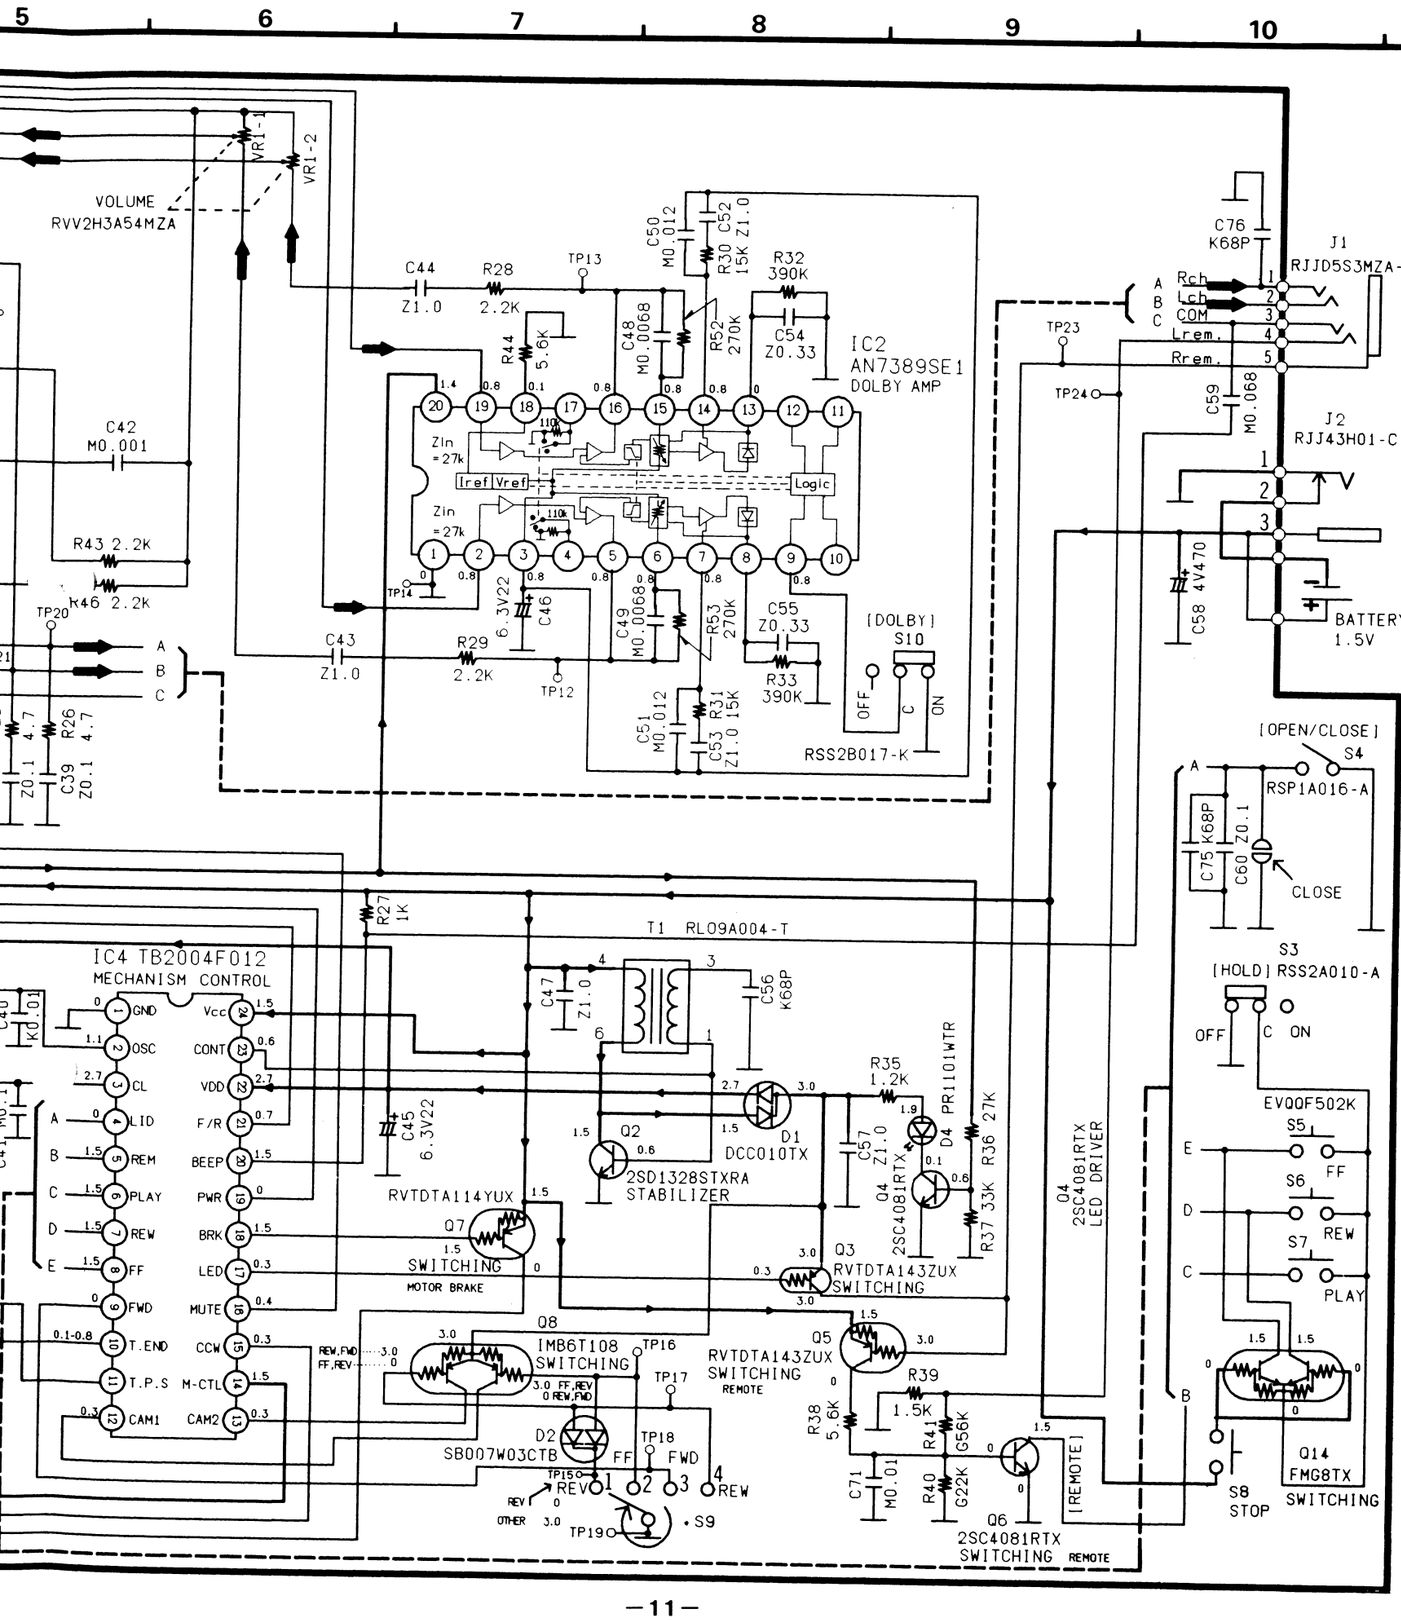

Notes:

- **S1** : S-XBS switch in "OFF" position.
- **S2** : Metal/normal switch in "METAL" position.
- **S3** : Hold switch in "OFF" position.
- **S4** : Open/close switch in "OPEN" position.
- **S5** : Fast foward switch in "OFF" position.
- **S6** : Rewind switch in "OFF" position.
- **S7** : Play switch in "OFF" position.
- **S8** : Stop switch in "OFF" position.
- **S9** : Rotary swich in " REV " position.
  1...REV, 2...FF, 3...FWD, 4...REW.
- **S10** : Dolby NR switch in "ON" position.

- **VR1-1, VR1-2** : Volume control VR.
- **VR2** : Tape speed adjustment VR.
- DC voltage measurements are taken with electronics voltmeter from negative terminal of battery.
  No mark...Playback.
- Battery current: No signal.....190 mA (VR: MIN)
  Maximum output.....210 mA (VR: MAX)

- **This schematic diagram may be modified at any time with the development of new technology.**

➡ : PLAYBACK SIGNAL
⟶ : ⊕ B LINE

■ REPLACEMENT PARTS LIST

Notes:(T)Indicates parts that are supplied by TAMACO

Ref No.	Part No.	Part Name & Description	Per Set	Remarks (T):TAMACO
		INTEGRATED CIRCUITS, TRANSISTORS AND DIODES		
IC1	LA4587MMPB	I.C.PRE/S-XBS/POWER AMP	1	(T)
IC2	AN7389SE1	I.C.DOLBY	1	(T)
IC3	LB1674MTPT1	I.C.MOTOR DRIVE	1	(T)
IC4	TB2004F012	I.C.MECH.CONTROL	1	(T)
Q1	2SB815B6TB	Transistor	1	(T)
Q2	2SD1328STXRA	Transistor	1	
Q3,5	RVTDTA143ZUX	Transistor	2	(T)
Q4,6,9,13	2SC4081RTX	Transistor	5	(T)
Q7	RVTDTA114YUX	Transistor	1	(T)
Q8	IMB6T108	Transistor	1	(T)
Q10,11,12	2SA1577QT106	Transistor	3	(T)
Q14	FMG8TX	Transistor	1	(T)
D1	DCC010TX	Diode	1	(T)
D2	SB007W03CTB	Shottcky Diode	1	(T)
D4	PR1101WTR	Chip L.E.D	1	(T)
		TRANSFORERS		
T1	RL09A004-T	Transformer	1	(T)
		VARIABLE RESISTOR		
VR1	RVV2H3A54MZA	V.R.Volume	1	(T)
VR2	RRN3A03BJ3XE	V.R.Tape Speed	1	(T)
		PHOTO COUPLER		
Z1	GP2S24BC	Photo Coupler	1	(T)
		SWITCHES		
S1	RSS2B017-K	SW,S-XBS	1	(T)
S2	RSS2B017-K	SW,Tape(Met/Nor)	1	(T)
S3	RSS2A010-A	SW,Hold	1	
S4	RSP1A016-A	SW,(Open/Close)	1	(T)
S5	EVQQF502K	SW,FF	1	(T)
S6	EVQQF502K	SW,Rew	1	(T)
S7	EVQQF502K	SW,Play	1	(T)
S8	EVQQF502K	SW,Stop	1	(T)
S9	RSR5D001-A	SW,Rotary	1	(T)
S10	RSS2B017-K	SW,Dolby	1	(T)
		JACKS		
J1	RJJD5S3MZA-C	Jack, Headphones	1	
J2	RJJ43H01-C	Jack, DC IN	1	

■PRINTED CIRCUIT BOARDS

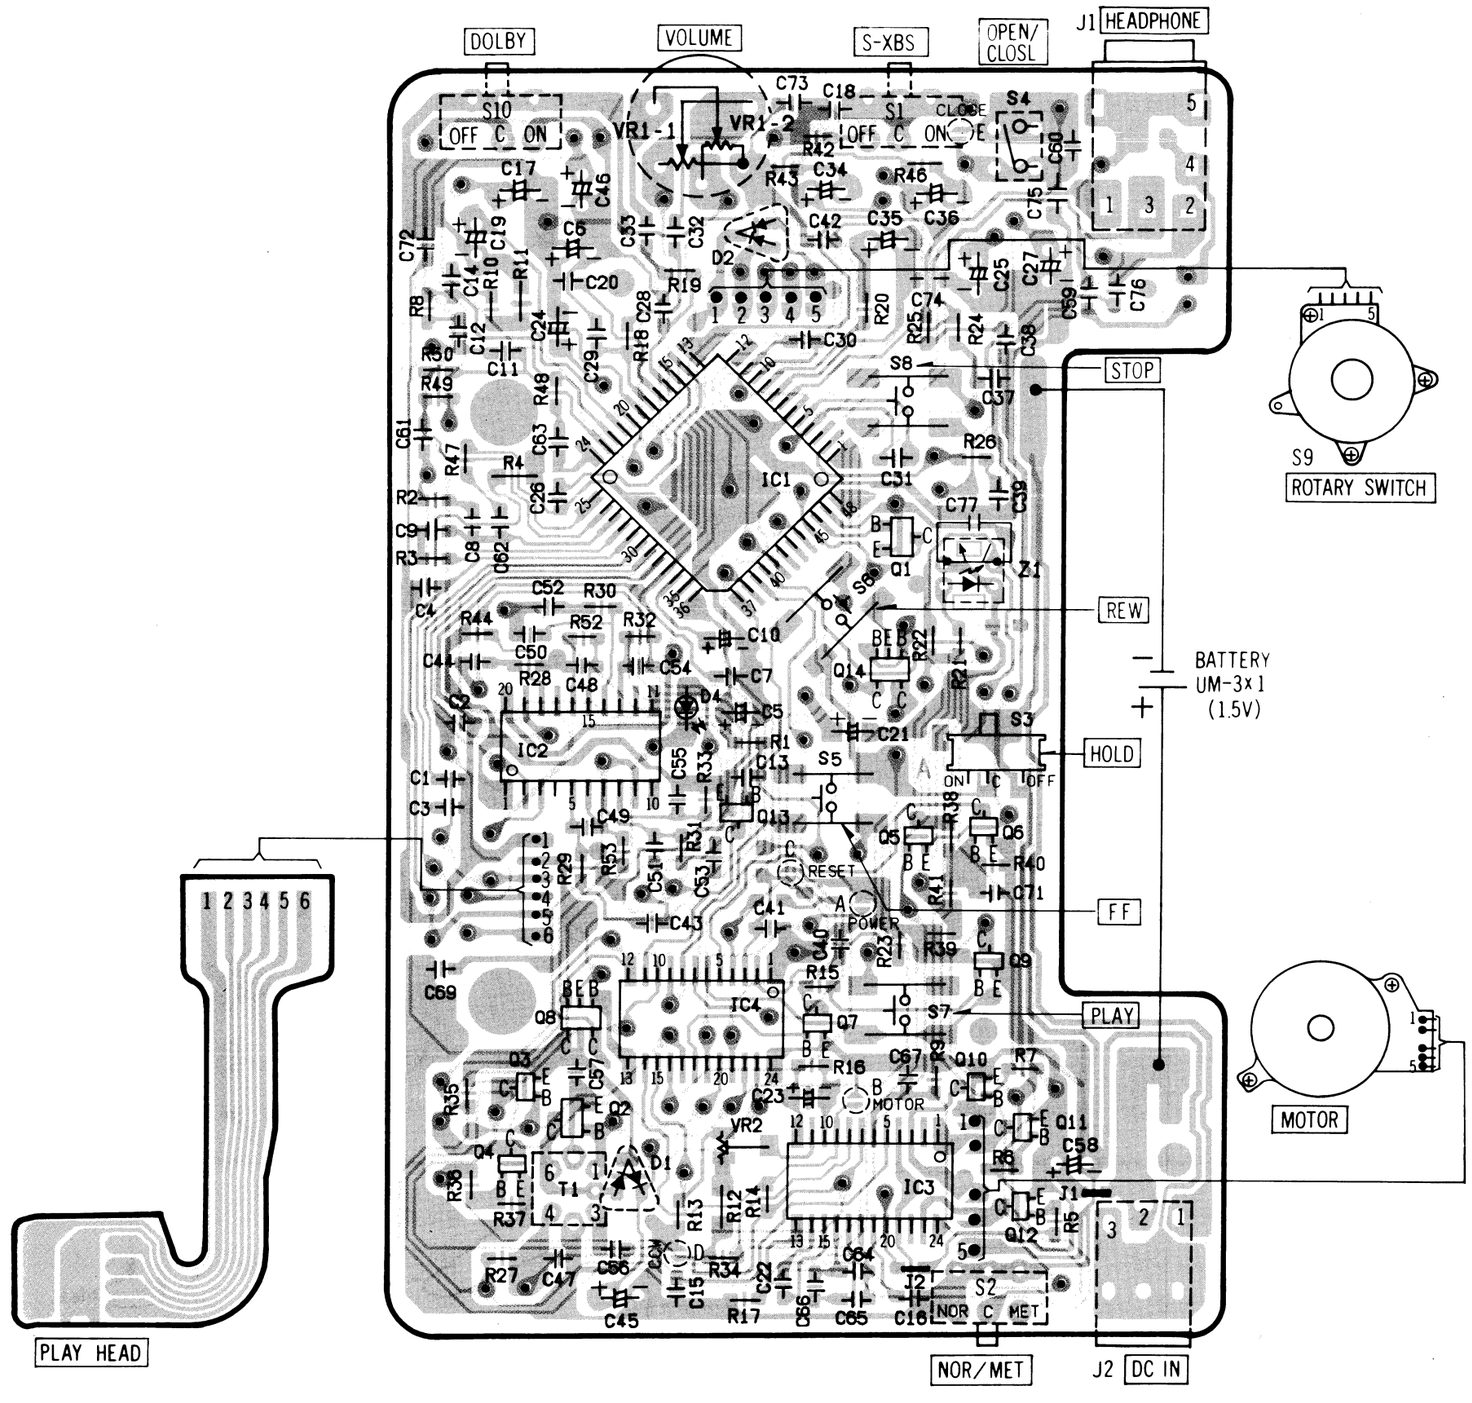

■RESISTORS & CAPACITORS PARTS LIST

Notes:(T)Indicates parts that are supplied by TAMACO

Ref No.	Part No.	Remarks (T):TAMACO
RESISTORS (Value is in Ohms)		
R1	ERJ6GEYJ273V	
R2,8,13	ERJ6GEYJ332V	
R3,10	ERJ6GEYJ682V	
R4,11	ERJ8GEYJ151V	
R5,6,7,17	ERJ6GEYJ331V	
R9,28,29,43,46	ERJ6GEYJ222V	
R12	ERSL20J152U	(T)
R14,47,48	ERJ6GEYJ472V	
R15,18,19,27	ERJ6GEYJ102V	
R16	ERJ6GEYJ563V	
R20,39	ERJ6GEYJ152V	
R21	ERJ6GEYJ431V	
R22	ERJ6GEYJ204V	
R23	ERJ6GEYJ433V	
R24,25,26	ERJ6GEYJ4R7V	
R30,31	ERJ6GEYJ153V	
R32,33,42,49,50	ERJ6GEYJ394V	
R34	ERJ6GEYJ822V	
R35	ERJ6GEYJ122V	
R36	ERJ6GEYJ273V	
R37	ERJ6GEYJ333V	
R38,44	ERJ6GEYJ562V	
R40	ERJ6GEYJ223V	
R41	ERJ6GEYJ563V	
R52,53	ERJ6GEYJ274V	
CHIP JUMPER		
RJ1,2	ERJ6GEY0R00V	

Ref No.	Part No.	Remarks (T):TAMACO
CAPACITORS		
C1,2,3,4,73,77	ECUV1H471KBN	
C5	RCSX0GY106RE	
C6,45,46	ECEA0JKS220I	
C7,28,29	ECUV1H681KBN	
C8,12,32,33,43,44,47,52,53,57,	ECUVNC105ZFN	
C9,14,22	ECUV1C223MBN	
C10	RCST1AY225RE	
C11,61	ECUV1C183MBN	(T)
C13,37,38,39,41,60,62,63	ECUV1C104ZFN	
C15,20,59,67	ECUV1C683MBN	
C16	ECUV1C474ZFN	
C17,19,	ECEA1EKS4R7I	
C18,48,49	ECUV1H682MBN	
C21	RCST0GY475RE	
C23	RCST1EY474RE	(T)
C24	RCSX0GY685RE	(T)
C25,34,35,36	ECEA1CKS100I	
C26	ECUV1E224ZFN	
C27	ECEA0GKS101I	
C30,31,64,65,66,71	ECUV1E103MBN	
C40	ECUV1E103KBN	
C42	ECUV1H102MBN	
C50,51	ECUV1C123MBN	(T)
C54,55	ECUV1C334ZFN	
C56,72,76	ECUV1H680KCN	
C58	ECEA0GKS471I	
C74,75	ECUV1E680KCM	(T)

Notes:

- In this printed circuit board diagram, the parts and foil patterns on the board facing toward you are printed in black.
  The opposite side is printed in blue.
- The " • " mark denotes the connection points of double-faced foil patterns (through holes) on both side of the printed circuit board.
- This printed circuit board diagram may be modified at any time with the development of new technology.

■ TERMINAL FUNCTION OF IC

• IC4 (TB2004F012): Mechanism control

Pin No.	Mark	I/O Division	Function
1	GND	—	GND terminal
2	OSC	I/O	System clock terminal fosc=3.2kHz
3	CL	I	Clear (RESET) terminal
4	LID	I	Detection signal whether the cassette tape is inserted
5	REM	I	Inputs the remote control signal
6	PLAY	I	Inputs the mechanism operation signal (PLAY) At low: PLAY
7	REW	I	Inputs the mechanism operation signal (REW) At low: REW
8	FF	I	Inputs the mechanism operation signal (FF) At low: FF
9	FWD	I	Inputs the mechanism status detection signal (FWD) At low: FWD
10	T•END	I	Inputs the signal for the derection of tape rotation. When the pulse signal is input: The current mode remains set as the tape is rotating. No pulse signal: Stops or starts reverse playback as the tape has stopped rotating (ie, reched the end)
11	TPS	I	Input the TPS control signal.
12	CAM 1	I	Inputs the mechanism status detection signal (FF/REV) At high: FF At cam 2 high: REV
13	CAM 2	I	Inputs the mechanism status detection signal (REW/REV) At high: REW At cam 1 high: REV
14	M-CTL	O	Outputs the motor drive signal (MOTOR ON/OFF). At high: ON At low: OFF
15	CCW	O	Outputs the reversing motor drive control signal At high: REV At low: FF
16	MUTE	O	Outputs the muting signal At low: muting ON
17	LED	O	Outputs the remote control LED signal At low: LED ON
18	BRK	O	Outputs the mechanism operation signal (STOP). At low: STOP
19	POWER	O	Outputs the power switching signal At low: ON
20	BEEP	O	Beep generation terminal of remote control operation
21	F/R	O	FWD/REV select terminal At high: FWD ON At low: REV ON
22	VDD	I	Power supply terminal
23	CONT	O	Outputs the DC-DC converter drive signal
24	VCC	I	Power supply terminal

• Terminal guide of IC's, transistors and diodes

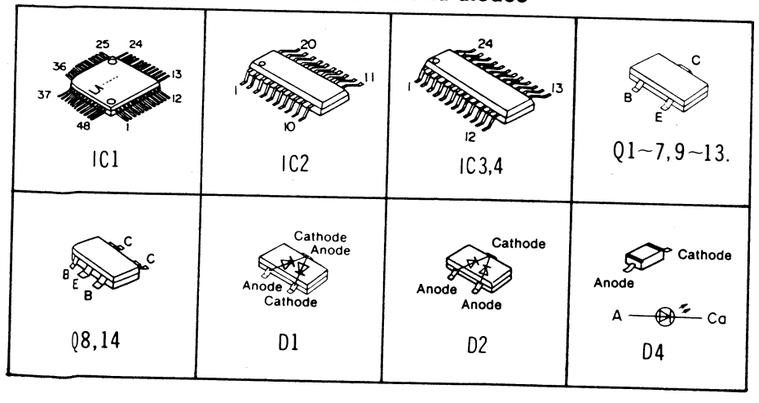

■ MECHANISM PARTS LOCATION

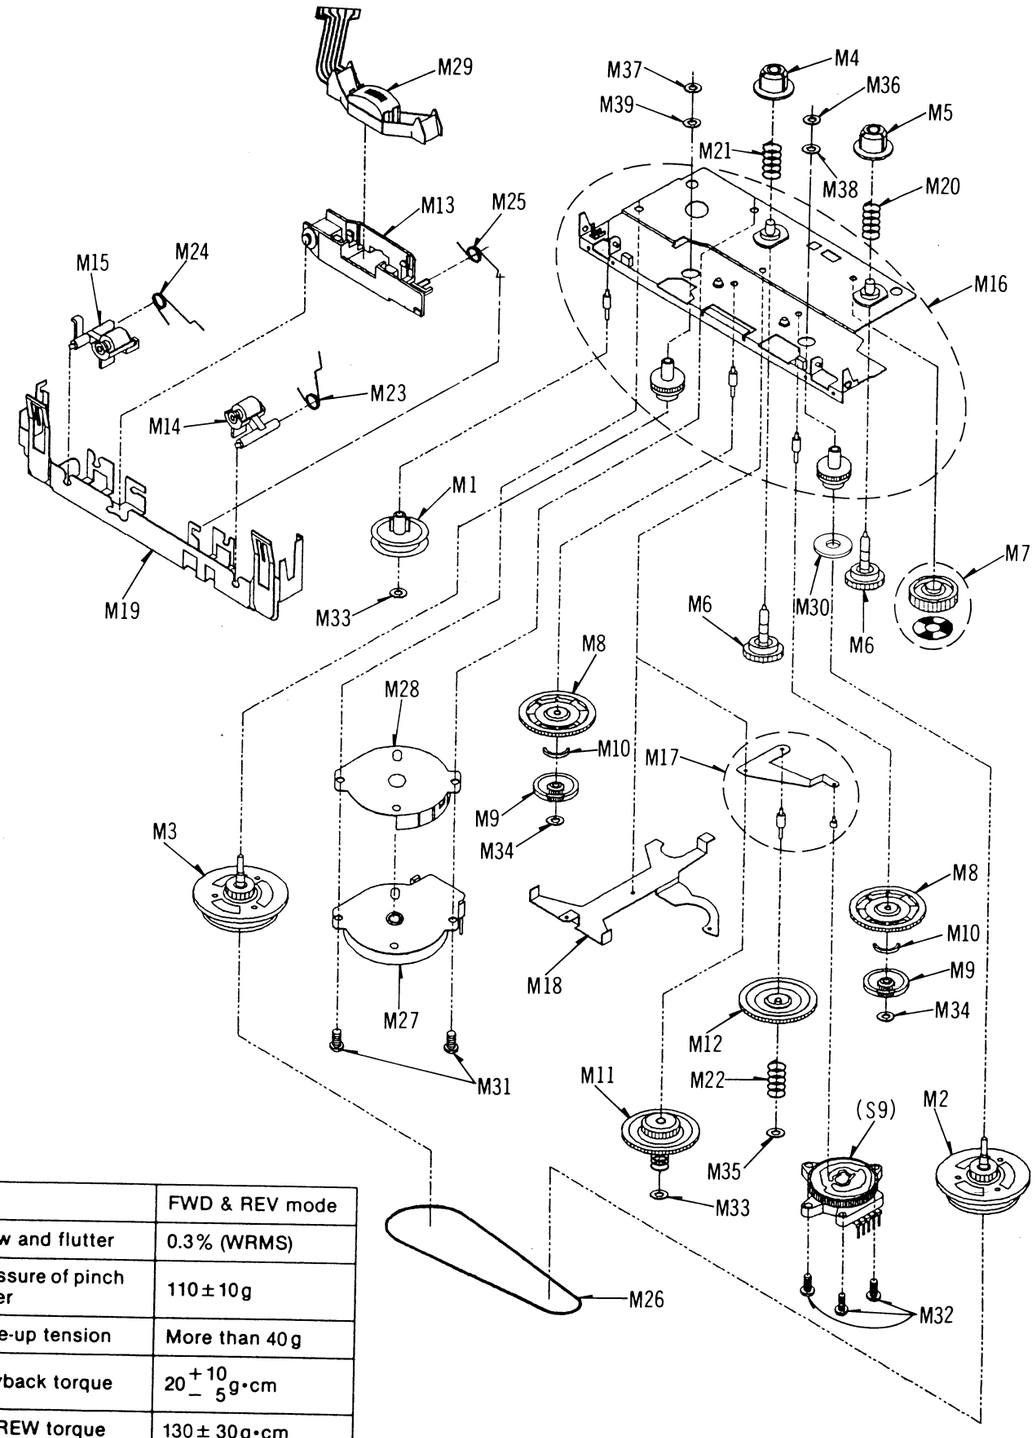

	FWD & REV mode
Wow and flutter	0.3% (WRMS)
Pressure of pinch roller	110±10g
Take-up tension	More than 40g
Playback torque	20^{+10}_{-5}g•cm
FF/REW torque	130±30g•cm

■ REPLACEMENT PARTS LIST

Note:(T)Indicates parts that are supplied by TAMACO.

Ref No.	Part No.	Part Name & Description	Per Set	Remarks (T):TAMACO
	MECHANICAL PARTS			
M1	RDP0069	Center Pulley	1	(T)
M2	RFKRQX10EA	Flywheel F Ass'y	1	(T)
M3	RFKRQX10EB	Flywheel R Ass'y	1	(T)
M4	RDR0025	Reel Cap (R)	1	(T)
M5	RDR0026	Reel Cap (L)	1	(T)
M6	RDG0274	Reel Gear	2	(T)
M7	RFKRQX10EC	Idler Gear Ass'y	1	(T)
M8	RDG0276	Change Gear A	2	(T)
M9	RDG0277	Change Gear B	2	(T)
M10	RMQ0434	Changing Plate	2	(T)
M11	RFKRQX10ED	Friction Gear Ass'y	1	(T)
M12	RDG0280	Operation Gear	1	(T)
M13	RML0335	Head Arm	1	(T)
M14	RFKRQX10EE	Pinch Roller Arm Ass'y F	1	(T)
M15	RFKRQX10EF	Pinch Roller Arm Ass'y R	1	(T)
M16	RFKRQX10EG	Chassis Ass'y	1	(T)
M17	RFKRQX10EH	Gear Lever Ass'y	1	(T)
M18	RML0339	Change Lever	1	(T)
M19	RFKRQX10EJ	Head Block Spacer	1	(T)
M20	RMB0353	Reel Spring F	1	(T)
M21	RMB0354	Reel Spring R	1	(T)
M22	RMB0356	Operation Gear Spring	1	(T)
M23	RMB0357	Pinch Arm Spring F	1	(T)
M24	RMB0358	Pinch Arm Spring R	1	(T)
M25	RMB0359	Head Arm Spring	1	(T)
M26	RDV0032	Belt	1	(T)
M27	BHL2B1CRA	Motor	1	(T)
M28	RSC0384	Shield Plate	1	(T)
M29	RBR4CY017-M	Head Ass'y	1	(T)
M30	RMQ0490	Bush	1	(T)
M31	RHD14044-K	Screw (Motor)	2	(T)
M32	RHD14043	Screw (Rotary Switch)	3	(T)
M33	RHW10003	Washer	2	(T)
M34	RHW17009	Washer	2	(T)
M35	RHW13012	Washer	1	(T)
M36	RHW11004	Washer	1	(T)
M37	RHW12015	Washer	1	(T)
M38	RHW13009	Washer	1	(T)
M39	RHW13010	Washer	1	(T)

Ref No.	Part No.	Part Name & Description	Per Set	Remarks (T):TAMACO
	CABINET PARTS			
K1	RKMT0007-H	Middle Cabinet	1	(T)
K2	RKST0008-K	Rear Cabinet	1	(T)
K3	RFKLQX20EA	Cassette Lid Ass'y	1	(T)
K4	RKKT0005-H	Battery Cover	1	(T)
K5	RKQT0001-H	Upper Cabinet	1	(T)
K6	RFKNQX10EA	Link Unit Ass'y	1	(T)
K7	RMAT0002	Basic Angle (R)	1	(T)
K8	RGWT0005-H	Open Knob	1	(T)
K9	RGUT0018-H	Deck Button	1	(T)
K10	RGVT0011-H	Hold Knob	1	(T)
K11	RGVT0012-K	S-XBS/Dolby NR/Tape Knob	3	(T)
K12	RMBT0001	Spring	1	(T)
K13	RMBT0002	Return Spring	1	(T)
K14	RGQT0004-K	Tape Plate	1	(T)
K15	RFKDQX10EA	Shell Lock Ass'y	1	(T)
K16	RJCT30005	Battery Terminal (+)	1	(T)
K17	RJCT70005	Battery Terminal (-)	1	(T)
K18	RMCT0002	Pack Spring	2	(T)
K19	RGWT0001-K	Volume Knob	1	(T)
K20	XSH14+4	Screw (VR)	1	(T)
K21	RHDT0001-K	Screw	3	(T)
K22	RHDT0002-K	Screw	2	(T)
K23	RHDT0002-S	Screw	1	(T)
K24	RHDT0003-K	Screw	6	(T)
K25	XTNR14+3	Screw	4	(T)
	ACCESSORY			
A1	RFEV124P-KS	Inner Phones	1	(T)
A2	RQTT0074-E	Instruction Book	1	(T)
A3 (E)	RFEB102E-S	Charger	1	(T)
A3 (EB)	RFEB102B-W	Charger	1	(T)
A4	P-70AARC/A3B	Rechargeable battery	1	(T)
	PACKING MATERIALS			
P1 (E)	RPKT0061A	Decoration Box	1	(T)
P1 (EB)	RPKT0030A	Decoration Box	1	(T)
P2 (E)	RPKT0061B	Accessory Box	1	(T)
P2 (EB)	RPKT0030B	Accessory Box	1	(T)
P3 (E)	RPKT0061C	Pad	1	(T)
P3 (EB)	RPKT0030C	Pad	1	(T)
P4	RPFT0007	Set Bag	1	(T)

■CABINET PARTS LOCATION

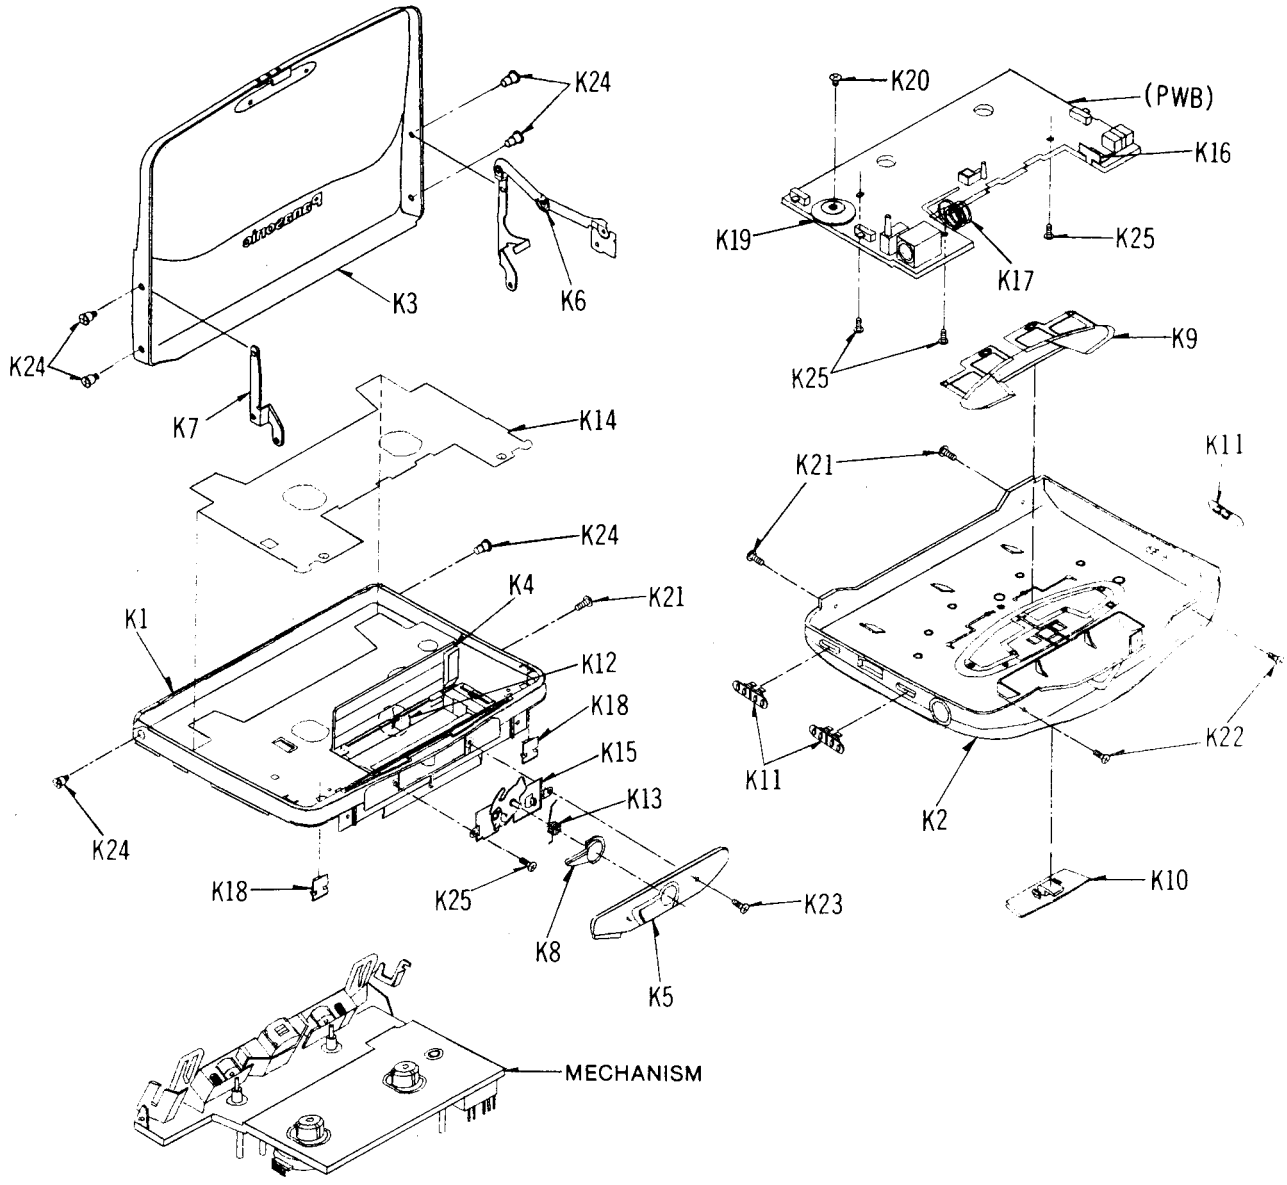

■PACKAGING

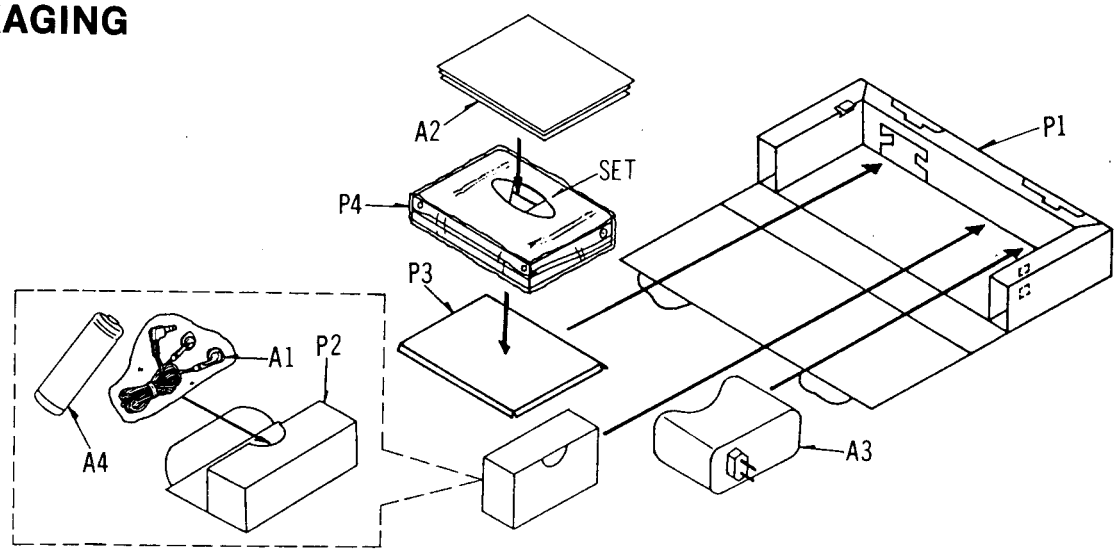

TAMACO Printed in Taiwan
940611000 TY/FA